CD Stereo Radio Recorder AZ8304

00/05

Service
Service
Service

Service Manual

For repair information of the cassette mechanism
see Service Manual of Recorders tape deck RDR-6

CONTENTS:

		page
Picture		2
Component Symbol, Controls and Connections		2a
Self Test Procedure		3
Specification		3a
ESD Warning and Safety Text		4
Set Wiring		5-6
Power	circuit diagram	7-8
	component layout	9-11
Tuner	component layout	12-13
	adjustment table	14
	circuit diagram	15-17
Feature	component layout	18-20
	circuit diagram	21-22
Tape Core	component layout	23
	adjustment table	24
	circuit diagram	25-26
Control	circuit diagram	27-28
	component layout	29-31
RCD	component layout	32-33
	adjustment table	34
	circuit diagram I	35-37
	circuit diagram II	38-40
Exploded View		41-42
Mechanical Partslist		43
Electrical Partslist		44-45

(SF) Varo!
Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

(S) Varning!
Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

CLASS 1
LASER PRODUCT
3122 190 03420

DocumentationTechnique Service Dokumentation Documentazione di Servizio Huolte-Ohje Manual de Servicio Manual de Servicio

PHILIPS

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

Subject to modification

4822 725 22988

Printed in The Netherlands

PHILIPS

Service Information

1993 - 04 - 19

AZ8300, AZ8301 and AZ8304 families

A93 - 188

Product Service Group CE Audio

To **prevent lens knocking against dust cover during "power on"** do the following on the CD board.
change 2829 from 220µF to 4.7µF 4822 124 23175

To **improve playability (test disc 7A/track 8)** do the following on the CD board.
change 2807 from 15pF to 33pF 4822 122 33069
3806 from 12kΩ to 4.7kΩ 4822 116 52283

To **adapt to small leaded component** do the following on the CD board.
change 3841/3842 from 1kΩ to 680Ω 4822 116 52228
3843/3844 from 470Ω to 330Ω 4822 116 52219
2843/2844 from 3.3nF to 4.7nF 4822 126 11714
2847/2848 from 33nF to 47nF 4822 126 12785

Further to earlier Service information **A92-179** (4822 725 24421) on the problem of **CD not able to play unless extra push down pressure is applied to the CD lid**, the additional self adhesive felt ring to be added onto the brass disc is 4822 529 10258 instead of 4822 532 52514.

Due to **logistic problem** the RCD-1D mechanism will be available for limited stocks after which all defective RCD-1D mechanisms (see figure 1) must be replaced with RCD-1.2D mechanism.

CD mechanism:	**Service code:**
RCD-1D	4822 691 20596
RCD-1.2D	4822 691 20768

For this reason the following are the **minimum necessary changes** required to adapt the electronics for use with RCD-1.2D mechanism:

Item	**From**	**To**	**Remarks**
2814	10µF	4.7µF	Focus search
2829	220µF	4.7µF	Vref buffer
3804	15k	8.2k	HF amplifier
3805	15k	8.2k	
3871	6.8k	18k	Sledge section
3872	100k	47k	

After adaptations, electrical adjustments must be done according to the enclosed new adjustment table.

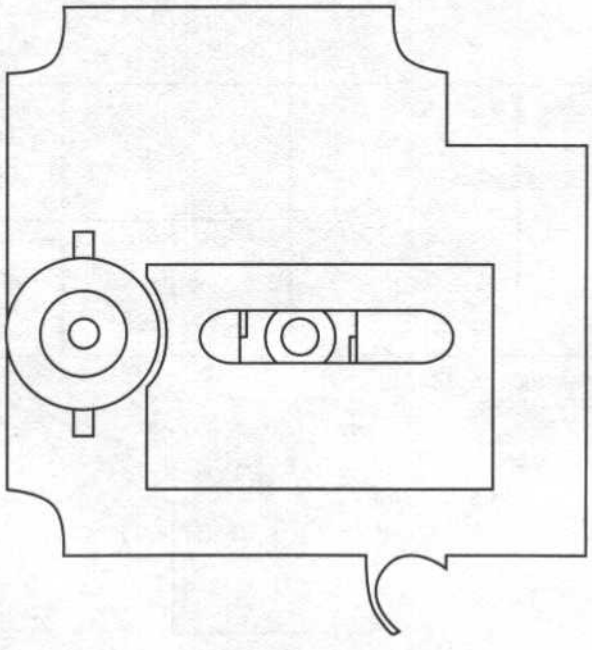

FIGURE 1. OLD RCD-ID MECHANISM

Service
Service
Service

ADJUSTMENT TABLE (valid for modified electronic acc. to service solution "Replacement RCD1→RCD1.2")

CD-PART					
LASER CURRENT					
The APC (Automatic Power Control) for the laser diode is located on the disc drive and has been adjusted in the production line. Therefore for service purpose it is not intended to adjust the laser current.					
TRACKING OFFSET					
STOP		◇6 ◇10	3840		Adjust to 0V DC ±10 mV
TRACKING BALANCE					
Service pos. 1 * Display shows "-"		◇8 ◇2	3803	Adjust to 0V DC offset	
TRACKING GAIN					
Play with Test-Disc 5 Connect pin 3 of M51564 to V_{ref} ◇2	1100 Hz 180 mVrms	see Fig. 1	3816		CHX = 100 mV/DIV CHY = 100 mV/DIV Adjust according to FIG.3
FOCUS GAIN					
Play with Test-Disc 5	960 Hz 300 mVrms	see Fig. 2	3813		CHX = 200 mV/DIV CHY = 200 mV/DIV Adjust according to FIG.3
FOCUS OFFSET					
Play with Test-Disc 5		◇9 ◇2	3821		Max. HF
		◇7 ◇2	Check only	DC voltage measured = Ux	
			3821	Adjust to $\frac{Ux}{2}$	

* How to enter service pos.1 see service test program
Test disc 5 4822 397 30096

FIG. 1

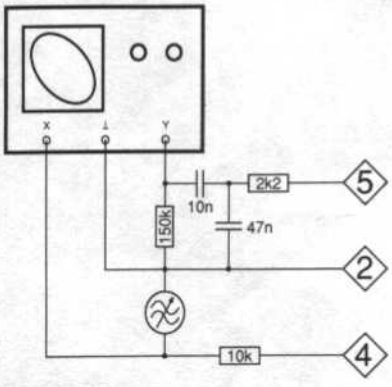

FIG. 2

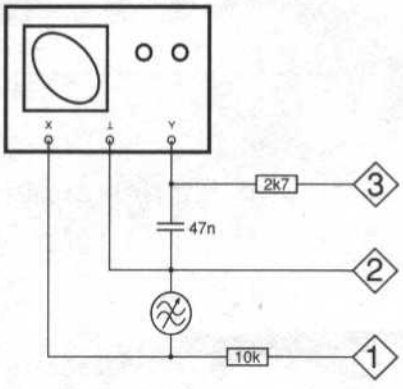

FIG. 3

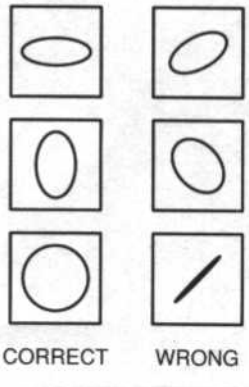

SERVICE TEST PROGRAMME

Following can be tested with **testprogramme 1**:

* Display CD
* Sledge motor
* Focus servo
* Track servo

Operating sequence	**Display shows**	**Remarks**	**In case of problems check**
Insert any disc in CD–compartment and shut CD–door. To start testprogramme 1 set mode switch to "radio" or "tape" first. Hold switches "display" and "clear" depressed while setting mode switch to "CD" → now **step 1** of the test programme is reached.		During step 1 – 3 "mute" is active.	connection Display
Press "play" to get to **step 2** Press "next" Press "previous"	 	Sledge will be moved outside as long as "next" will be hold depressed (display shows fig.2b) and moved inside as long as "previous" will be hold depressed (display shows fig.2c).	Sledge motor and driver circuit for sledge motor
Press "play" to get to **step 3**	 	Laser is now switched on and objective will be focussed (while focussing display shows fig.3a). As soon as focus is o.k. display shows fig.3b and disc motor is switched on. Sledge servo and tracking servo are switched off → "tracking offset" can be adjusted.	Focus servo circuit
Press "play" to get to **step 4** Press "next" Press "previous"		Track servo loop is active → **normal "play" mode.** "Mute" will be switched off after pressing "next" or "previous". By pressing "next" or "previous" track servo will jump in steps of either 16 tracks forward or backward.	
Press "stop" to get back in normal CD-mode		By pressing "stop" Service Testprogramme can be interrupted during each step.	

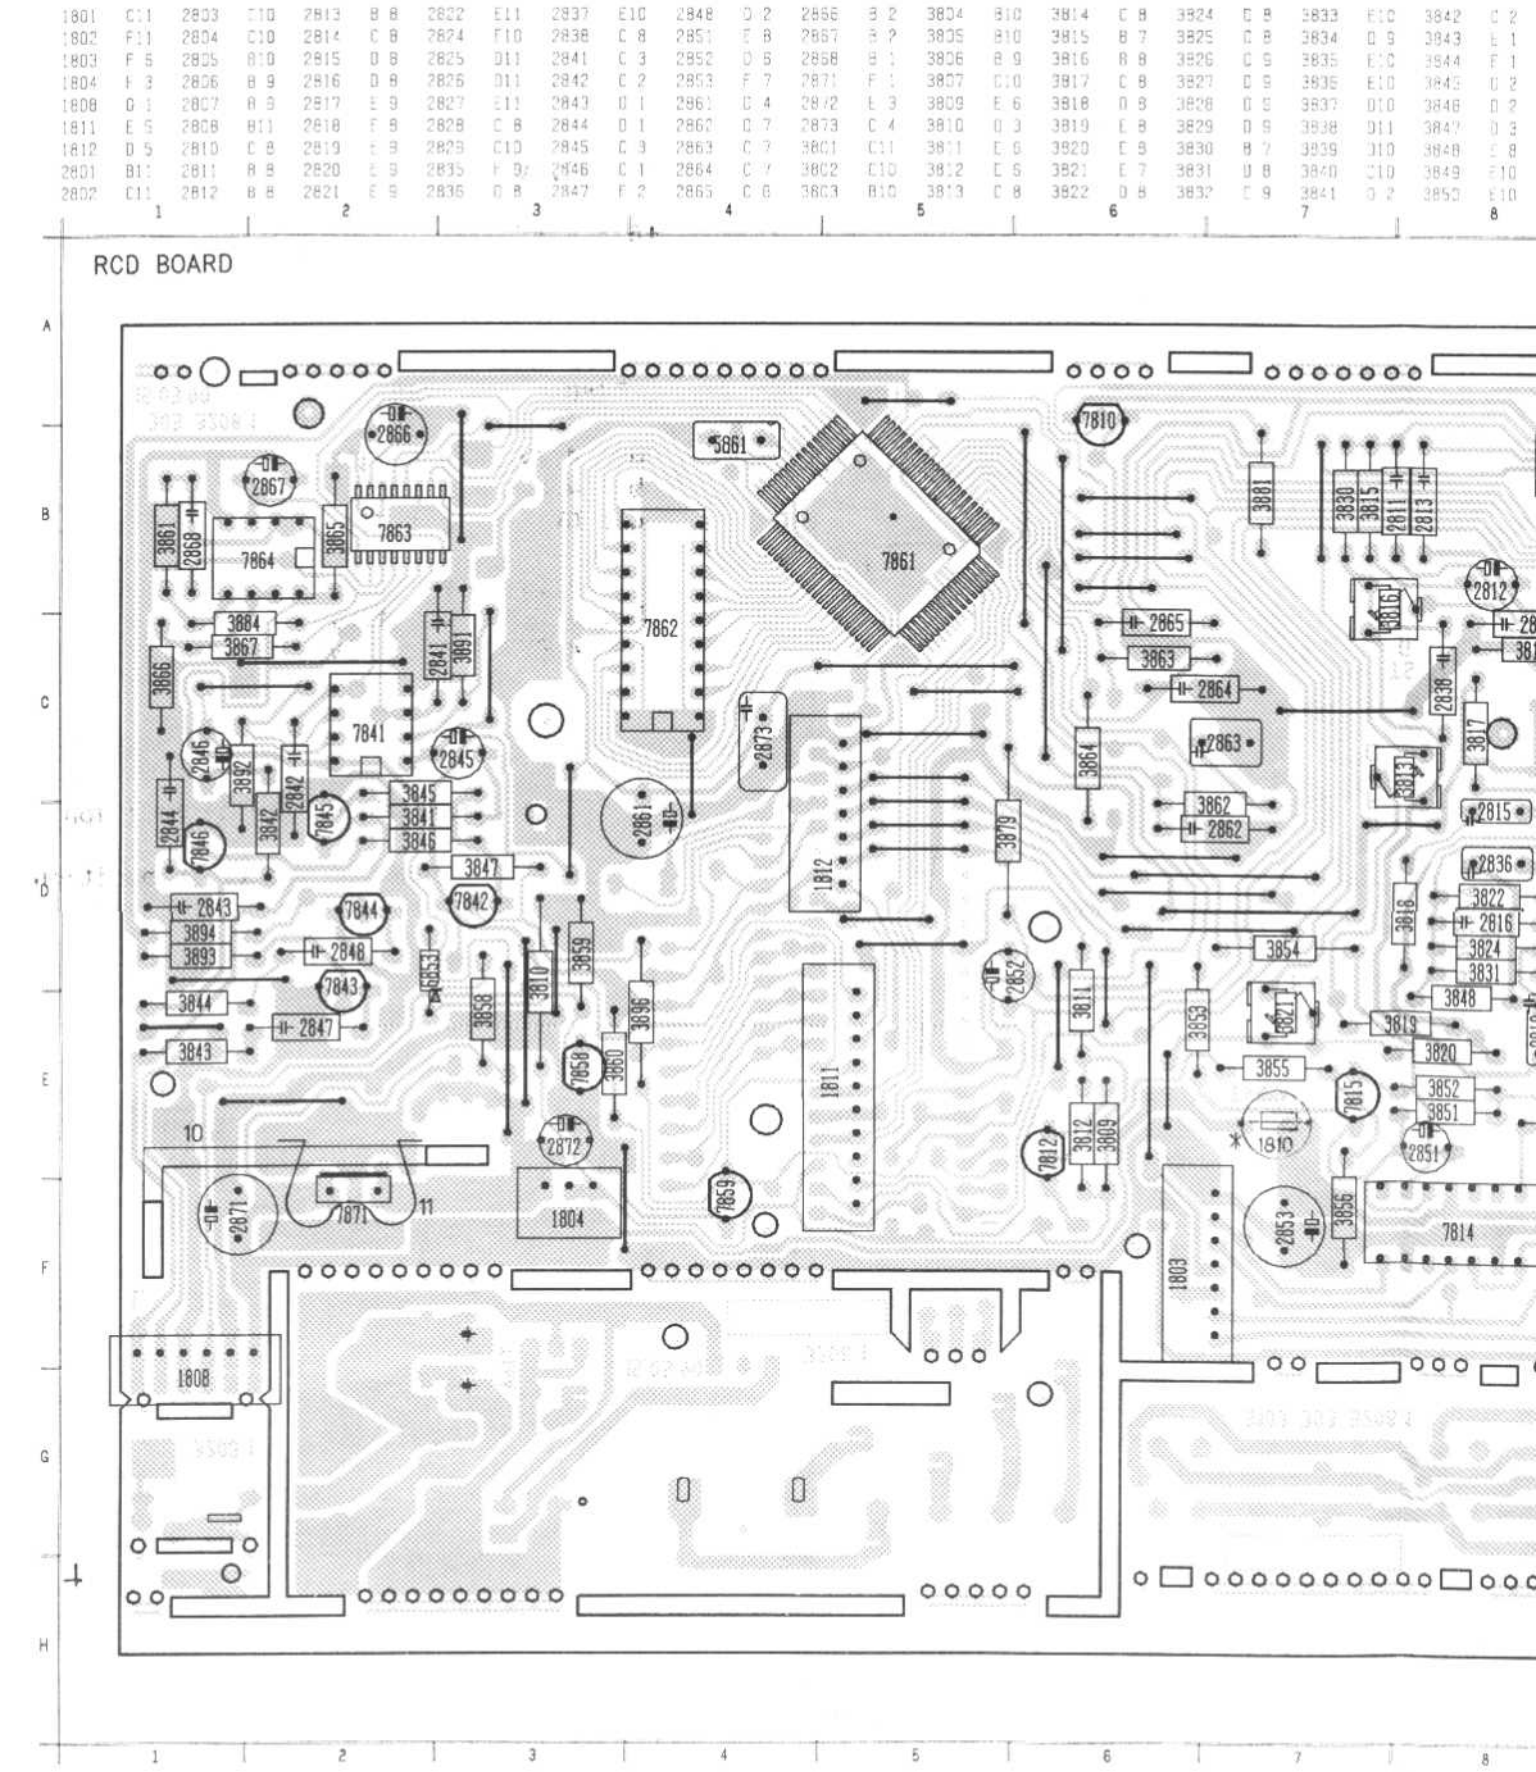

ASSEMBLY DRAWING FOR AZ8700 FROM COMPONENT SIDE
BESTUECKUNGSPLAN FUER AZ8700 VON BAUTEILSEITE

DERIVED FROM PART PC.AZ8594.P8.D1
ERZEUGT VOM PART PC.AZ8594.P8.D1

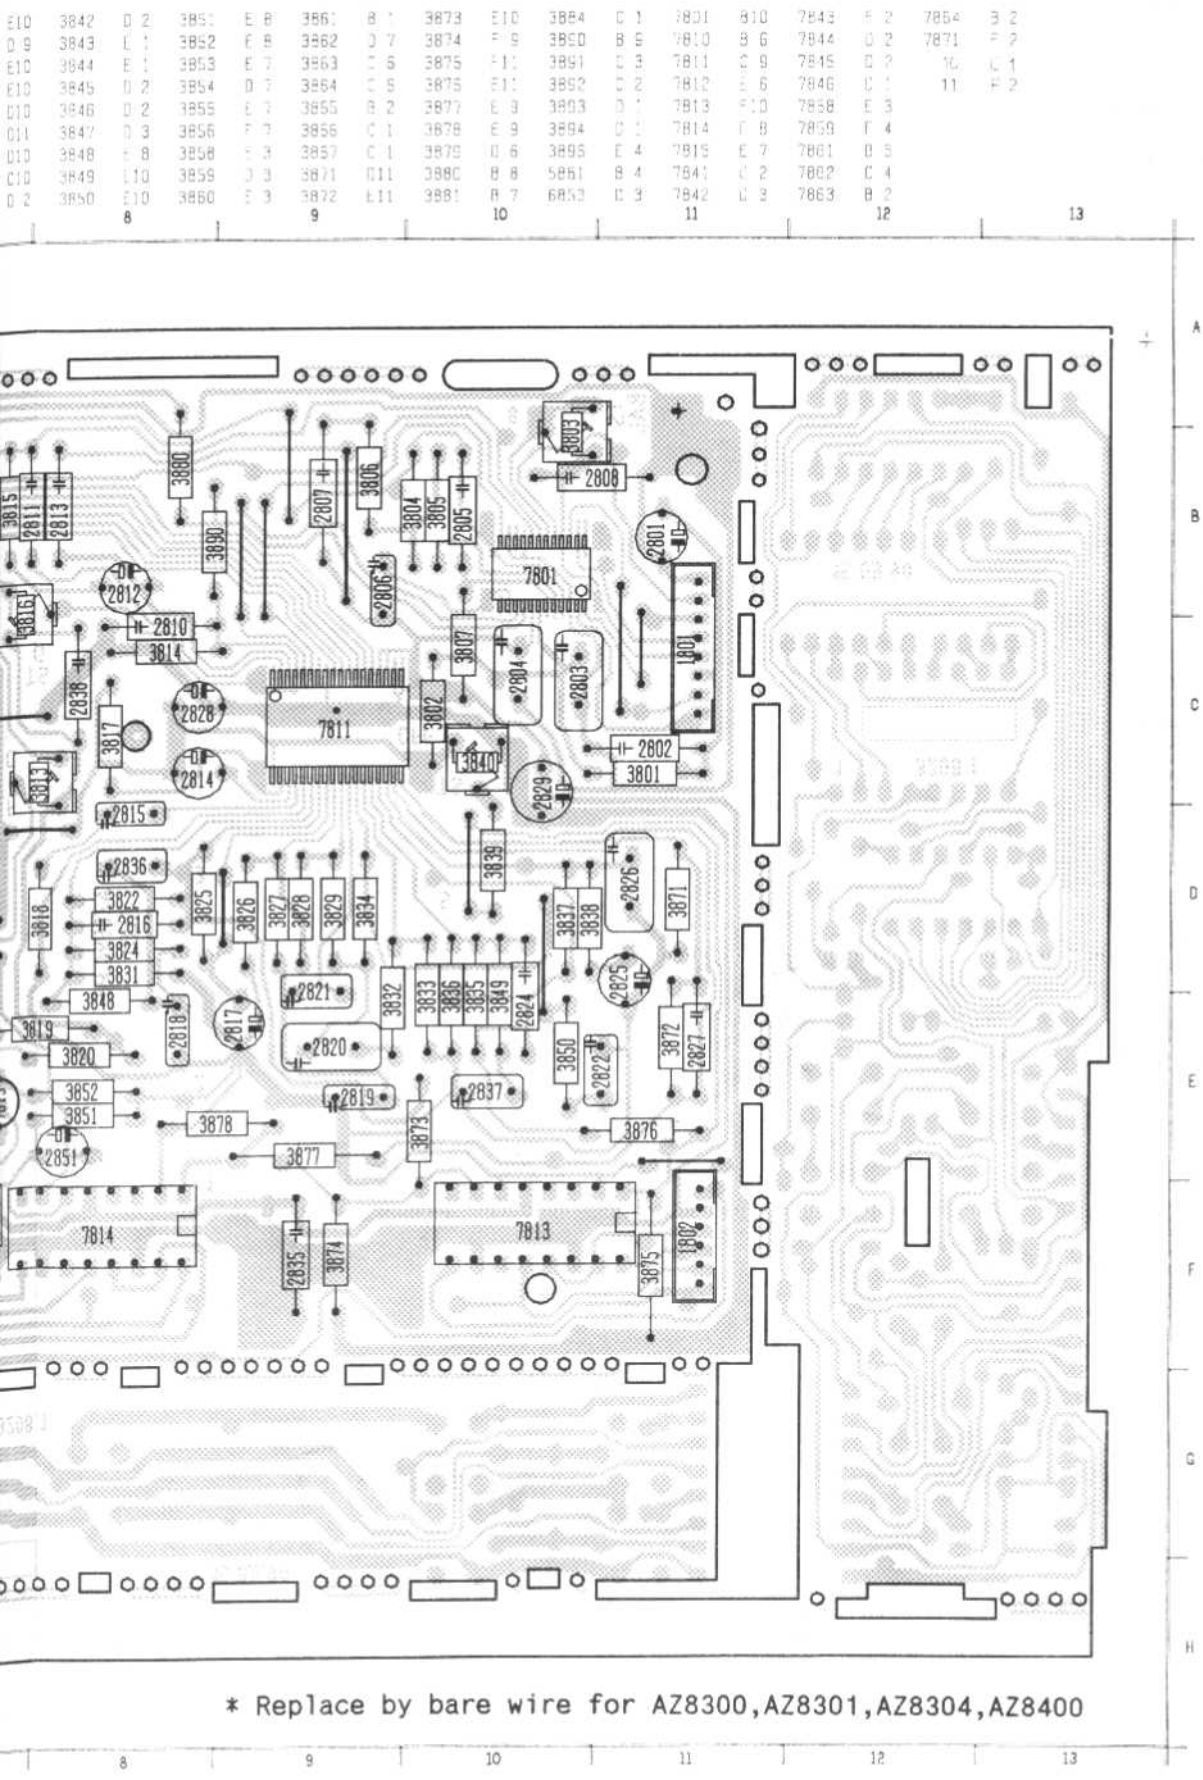

* Replace by bare wire for AZ8300,AZ8301,AZ8304,AZ8400

....V measured in CD play position

7841

1	:	2.5V
2	:	2.5V
3	:	2.5V
4	:	0V
5	:	2.5V
6	:	2.5V
7	:	2.5V
8	:	5V

7864

1	:	2.5V
2	:	2.5V
3	:	2.5V
4	:	0V
5	:	2.5V
6	:	2.5V
7	:	2.5V
8	:	5V

7871

1	:	9.2V
2	:	0V
3	:	5V

CD PART
SERVO DIAGRAM

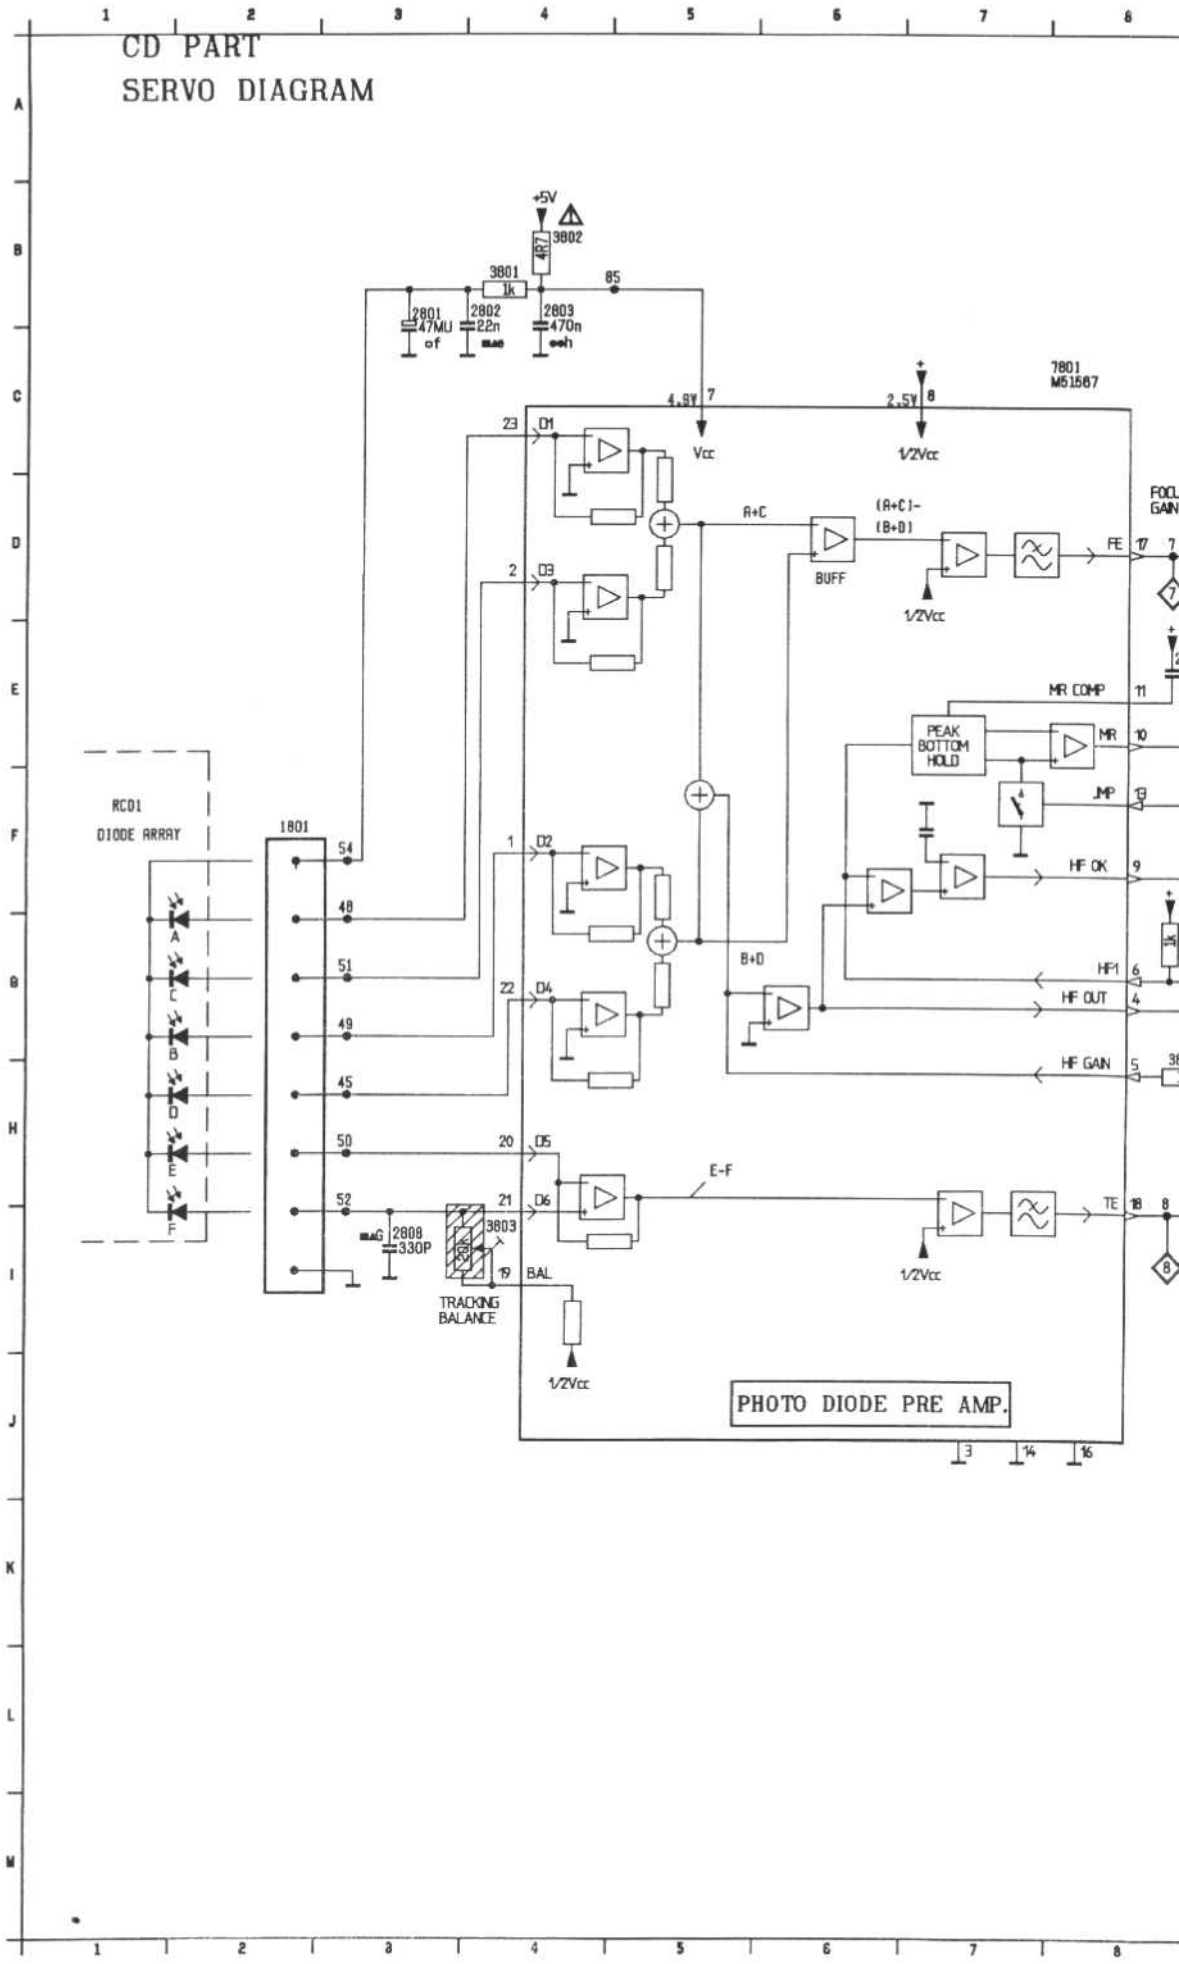

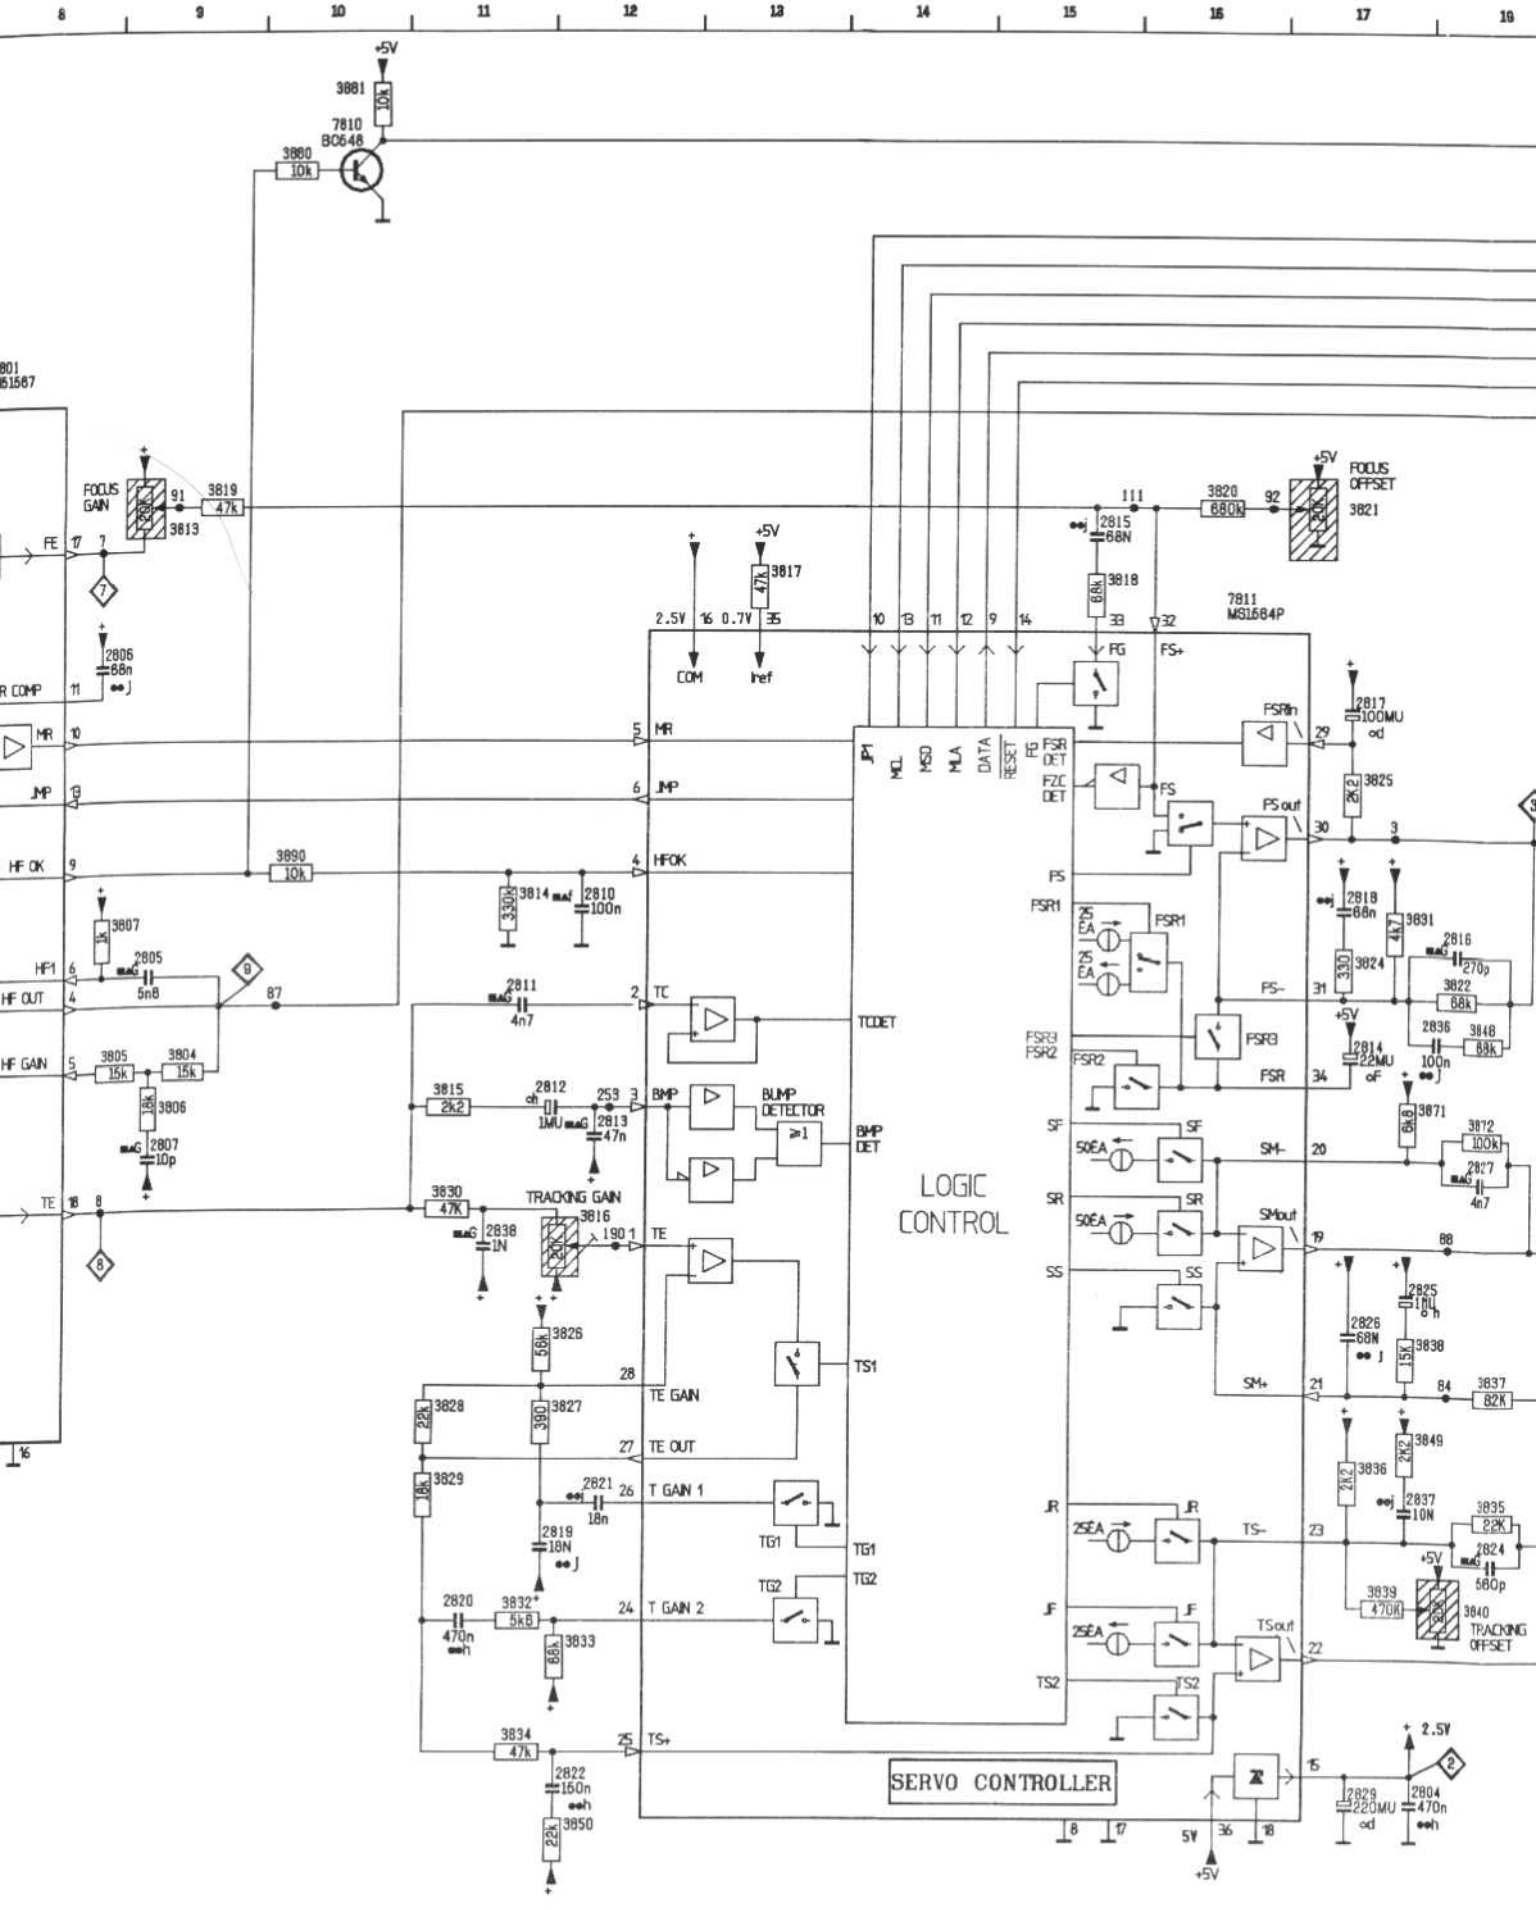
LOGIC
CONTROL
SERVO CONTROLLER
7811
MSI1684P
FOCUS
GAIN
FOCUS
OFFSET
TRACKING GAIN
TRACKING
OFFSET
BUMP
DETECTOR
COM
Iref
MR
JMP
HFOK
TC
TCDET
BMP
BMP
DET
TE
TE GAIN
TE OUT
T GAIN 1
T GAIN 2
TS+
TS-
TSout
TG1
TG2
TS1
TS2
FS+
FS-
FS
FSout
FSR
FSR1
FSR2
FSR3
FSRin
FSR
DET
FZC
DET
SF
SR
SS
SM-
SM+
SMout
JF
JR
FG
JP1
MCL
MSD
MLA
DATA
RESET
HF OK
HF1
HF OUT
HF GAIN
R COMP
FE
TE
+5V
2.5V
0.7V

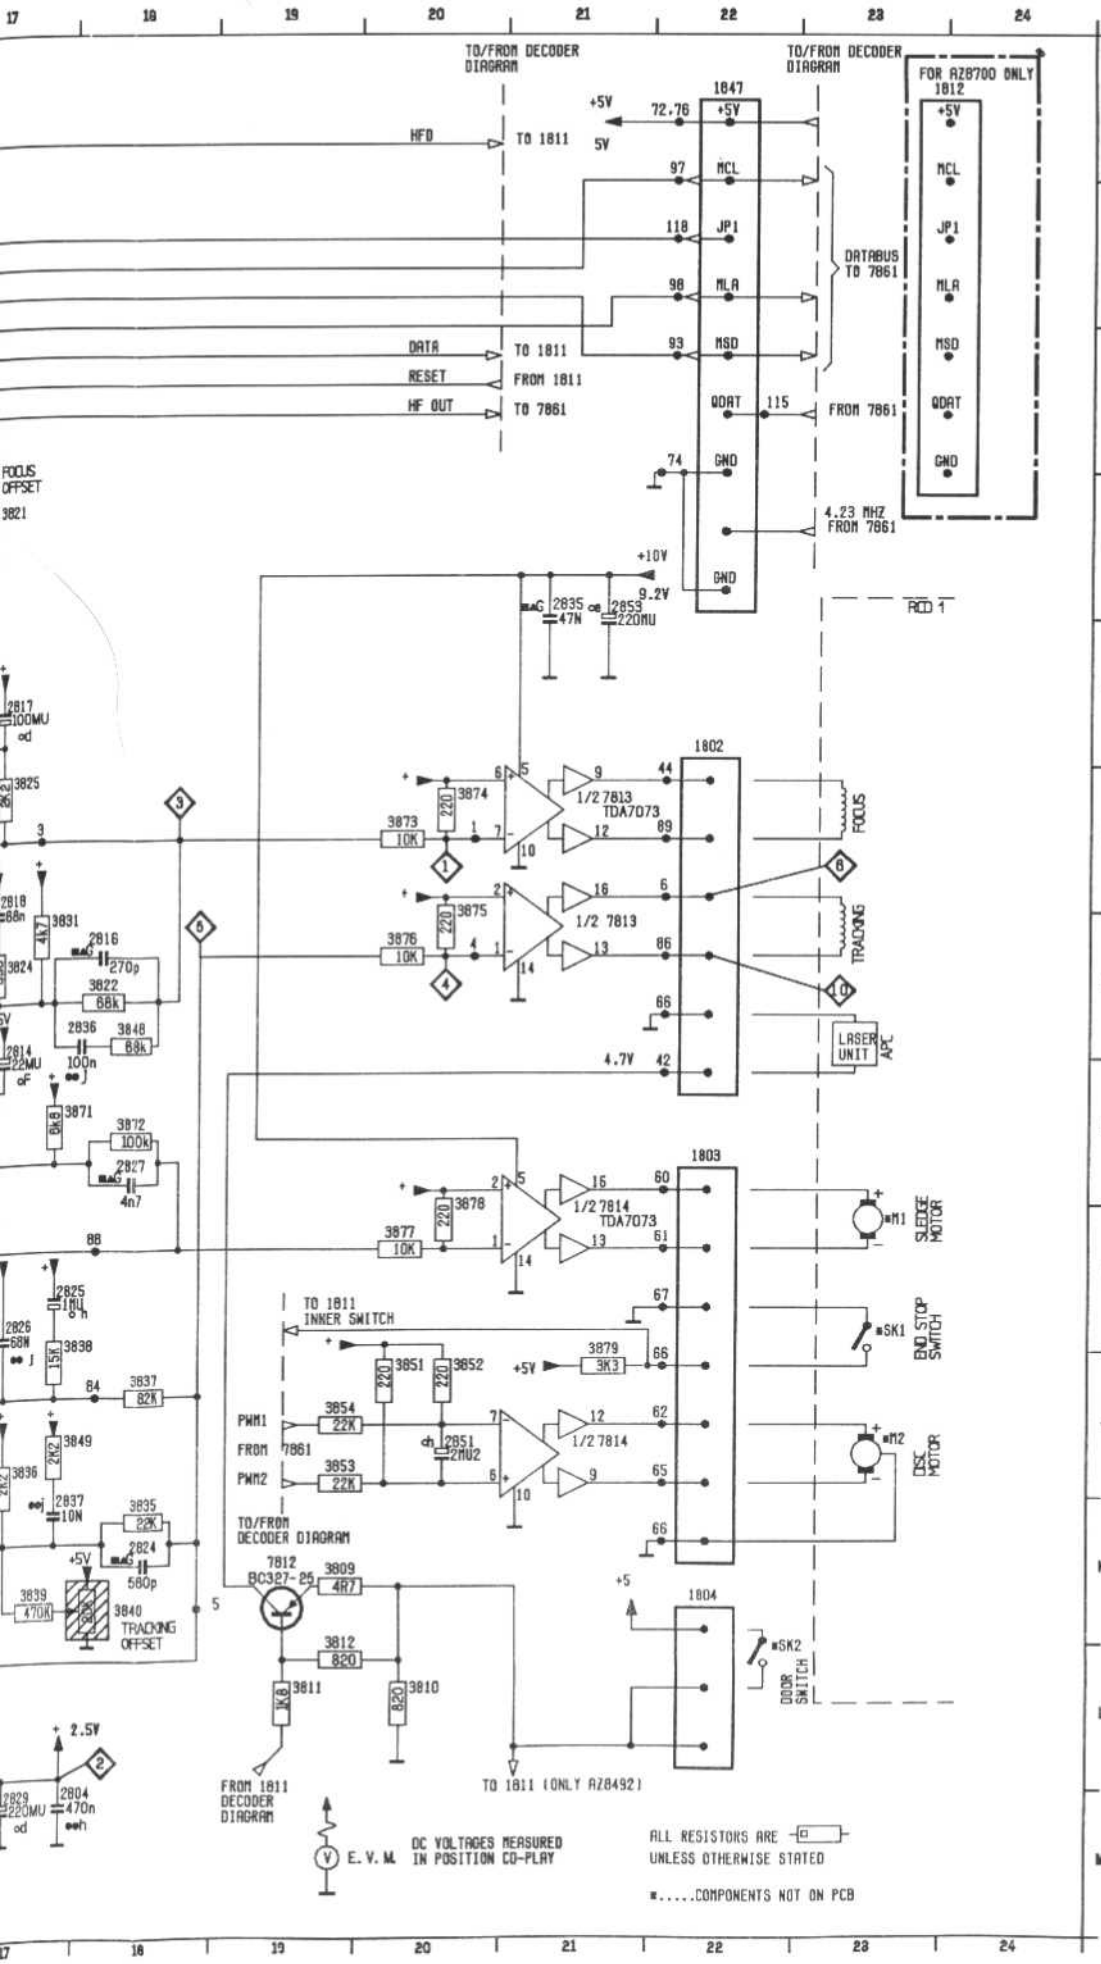

*M1 I23
*M2 J23
*SK1 I23
*SK2 L22
A 1801 F 2
1802 E22
1803 H22
1804 K22
1812 A24
1847 A22
2801 B 3
2802 B 3
B 2803 B 4
2804 L17
2805 G 9
2806 E 8
2807 H 9
2808 I 3
2810 F12
2811 G11
C 2812 H12
2813 H12
2814 G17
2815 D15
2816 G18
2817 E17
2818 F17
2819 K11
D 2820 K11
2821 J12
2822 L11
2824 K18
2825 I17
2826 I17
2827 H18
2829 M17
E 2835 D21
2836 G18
2837 J17
2838 I11
2851 J20
2853 D21
3801 B 4
3802 B 4
F 3803 I 4
3804 G 9
3805 G 8
3806 H 9
3807 G 8
3809 K19
3810 L20
3811 L19
3812 K19
G 3813 D 9
3814 F11
3815 H11
3816 I12
3817 D13
3818 D15
3819 D 9
3820 D16
H 3821 D17
3822 G18
3824 G17
3825 F17
3826 I11
3827 J11
3828 J11
3829 J11
I 3830 H11
3831 G17
3832 K11
3833 K12
3834 L11
3835 K18
3836 J17
3837 J18
J 3838 I17
3839 K17
3840 K18
3848 G18
3849 J17
3850 M12
3851 J20
3852 J20
K 3853 J19
3854 J19
3871 H17
3872 H18
3873 F20
3874 F20
3875 F20
3876 G20
L 3877 I20
3878 H20
3879 I21
3880 A10
3881 A10
3890 F10
7801 C 7
7810 A10
M 7811 D16
7812 K19
7813 F21
7814 I21

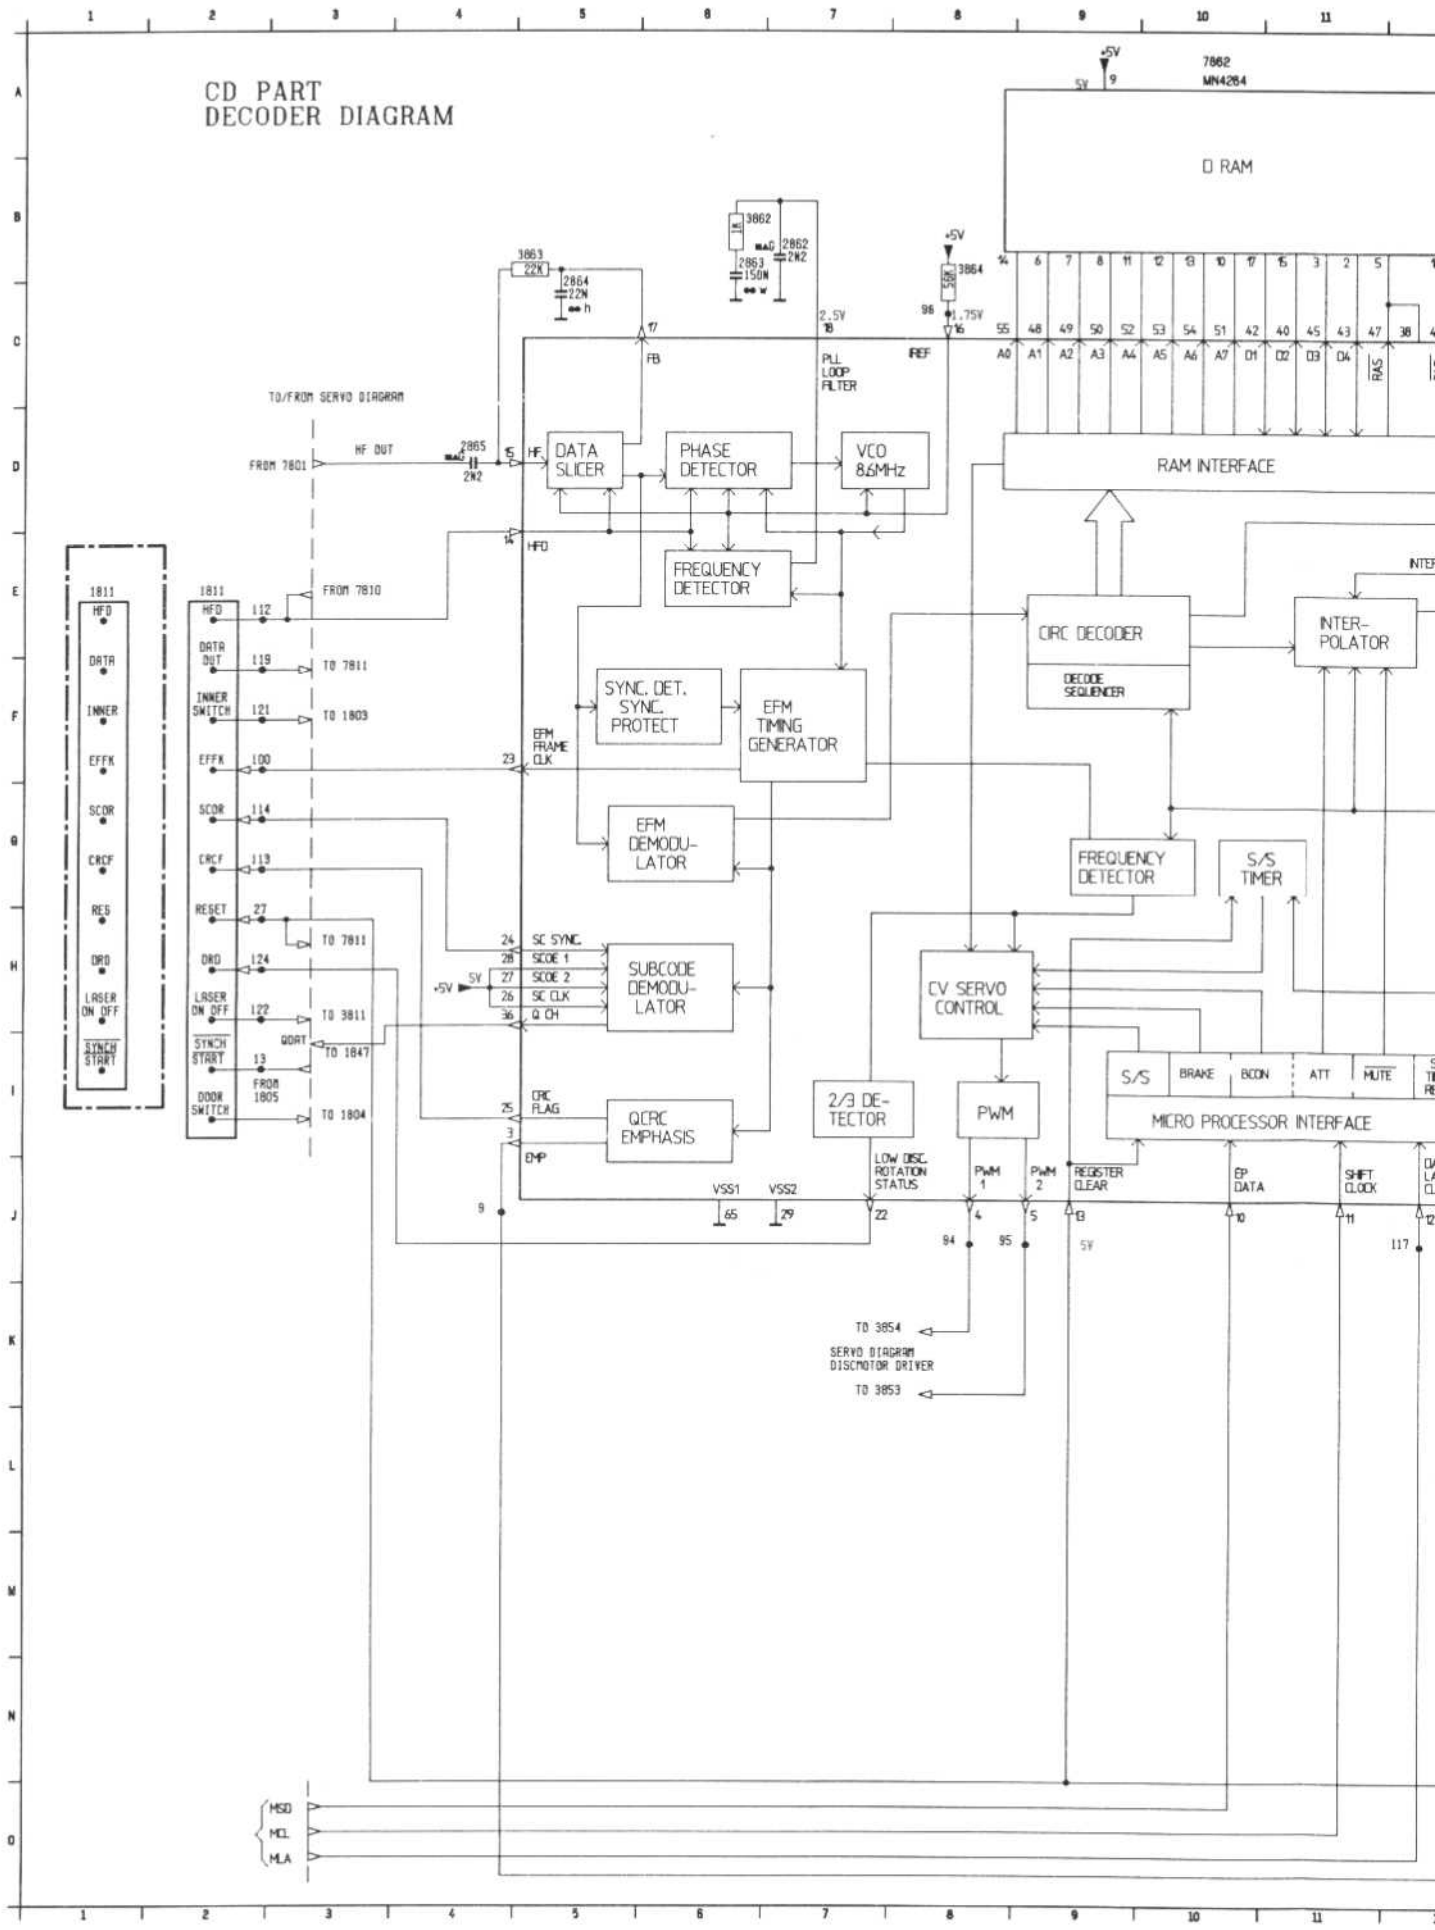
CD PART
DECODER DIAGRAM
D RAM
RAM INTERFACE
DATA SLICER
PHASE DETECTOR
VCO 8.6MHz
FREQUENCY DETECTOR
PLL LOOP FILTER
SYNC. DET. SYNC. PROTECT
EFM TIMING GENERATOR
EFM DEMODU-LATOR
SUBCODE DEMODU-LATOR
QCRC EMPHASIS
CIRC DECODER
DECODE SEQUENCER
INTER-POLATOR
FREQUENCY DETECTOR
S/S TIMER
CV SERVO CONTROL
2/3 DE-TECTOR
PWM
MICRO PROCESSOR INTERFACE
TO/FROM SERVO DIAGRAM
FROM 7801
HF OUT
FROM 7810
TO 7811
TO 1803
TO 3811
TO 1847
TO 1804
FROM 1805
TO 3854
SERVO DIAGRAM DISCMOTOR DRIVER
TO 3853

* Replace by bare wire for AZ8300,AZ8301,AZ

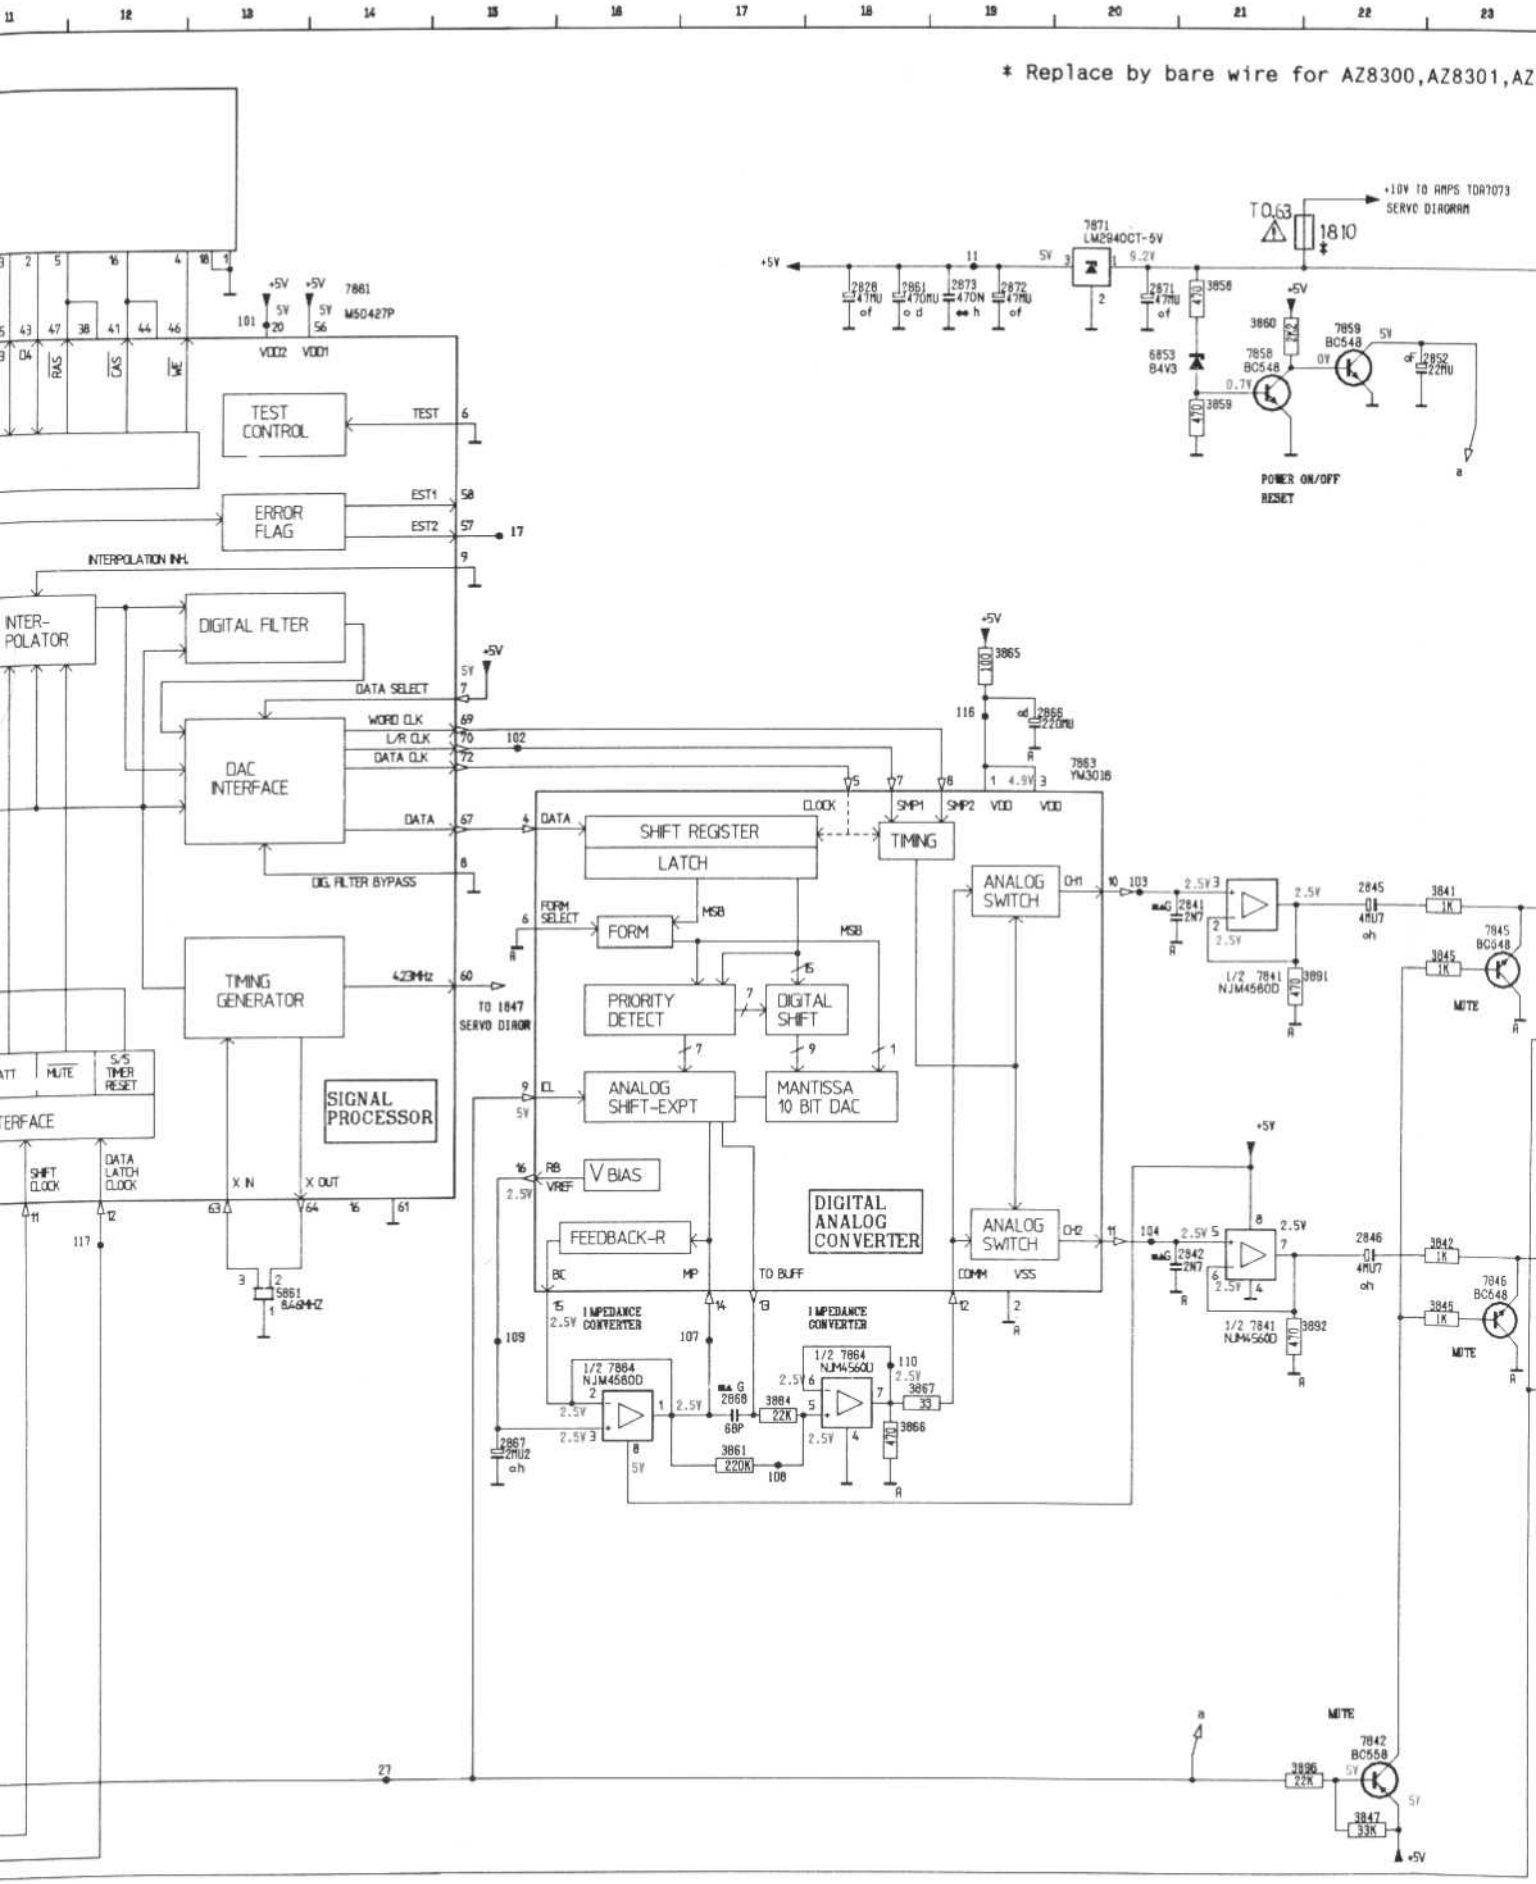

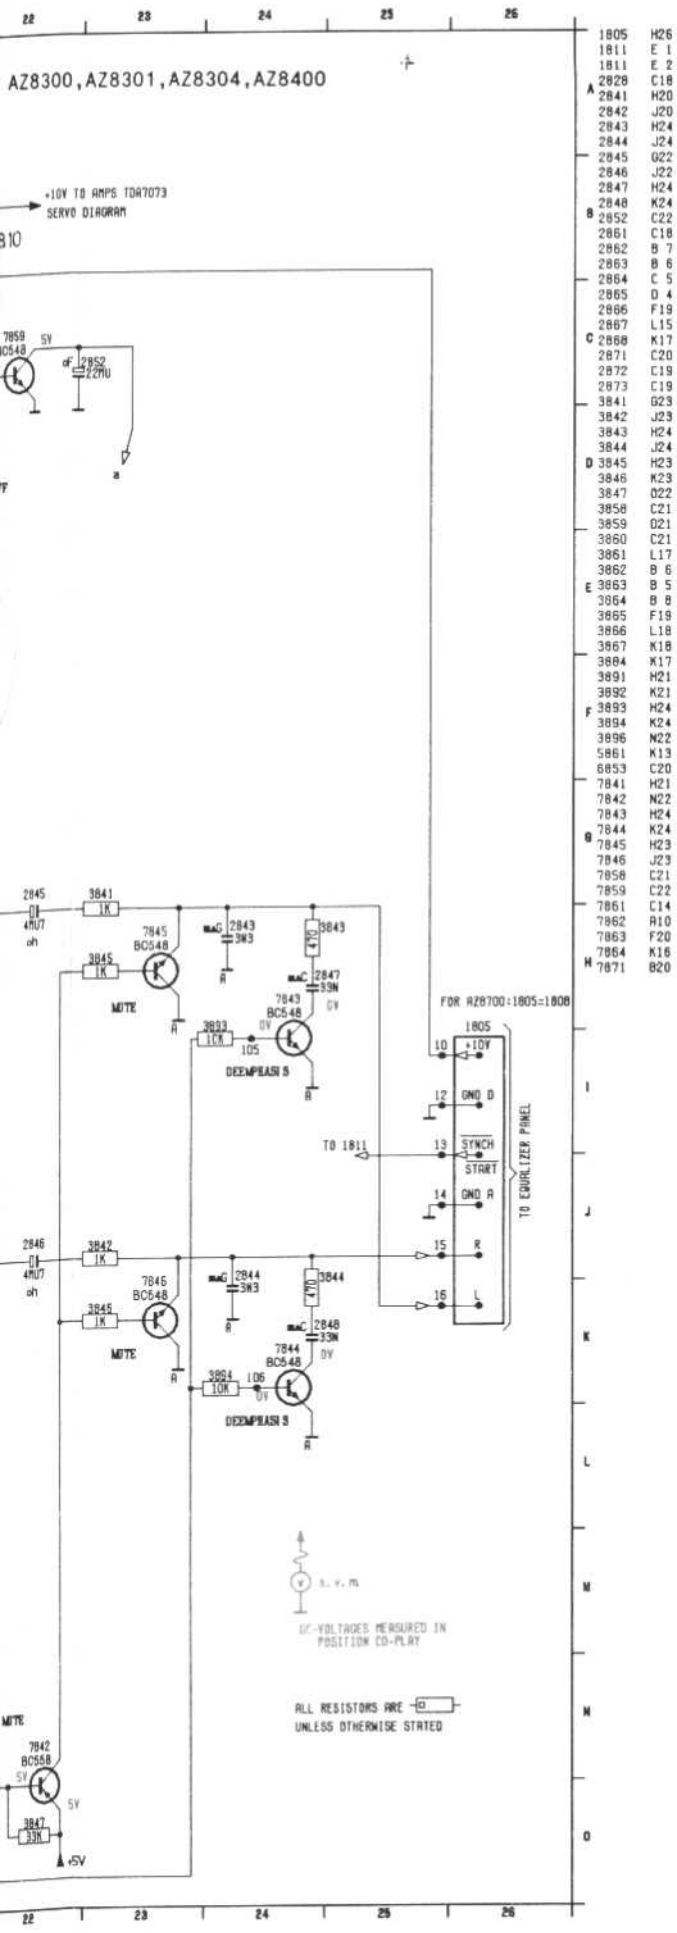

1805 H26
1811 E 1
1811 E 2
2828 C18
2841 H20
2842 J20
2843 H24
2844 J24
2845 G22
2846 J22
2847 H24
2848 K24
2852 C22
2861 C18
2862 B 7
2863 B 6
2864 C 5
2865 D 4
2866 F19
2867 L15
2868 K17
2871 C20
2872 C19
2873 C19
3841 G23
3842 J23
3843 H24
3844 J24
3845 H23
3846 K23
3847 D22
3858 C21
3859 D21
3860 C21
3861 L17
3862 B 6
3863 B 5
3864 B 8
3865 F19
3866 L18
3867 K18
3884 K17
3891 H21
3892 K21
3893 H24
3894 K24
3896 N22
5861 K13
6853 C20
7841 H21
7842 N22
7843 H24
7844 K24
7845 H23
7846 J23
7858 C21
7859 C22
7861 C14
7862 A10
7863 F20
7864 K16
7871 B20